CLEANING INSTRUCTIONS FOR THE BUTTON EXTENSION SET

To reduce the risk of contamination wash the button extension set thoroughly after every use, using the following instructions.

- Close the clamp and turn the extension set anti-clockwise to match up the markings. Gently
 pull the extension set to remove it from the button
- · Open the clamp and wash thoroughly in warm soapy water
- Using a brush, clean the connectors to remove any build up in the threads
- Flush with at least 60ml sterile/cool boiled water to remove any soap remnants
- If using for more than 7 days (maximum 14 days) flush with at least 60ml sterilising solution, suitable for
 use with plastic products. Rinse thoroughly with sterile/cool boiled water to remove any sterilising solution
- Allow to air dry in a hanging position. Store in an air tight container or zip lock bag until next use.

Before each use check the connectors and tube for cracking, dislocation, or discolouring. If any of these are observed a new extension set must be used.

